

# Touch Panel Device driver setting manual

## For CentOS 6.x - 8.x

### Prepare to Install

#### Multiple display configuration

##### configuration on CentOS 6.x

Set your display mode as desired using

1. Clicking System at the menu bar.
2. On the expended System menu, point your mouse pointer to Preferences
3. click on Display.

##### configuration on CentOS 7 or later

Set your display mode as desired using

Settings -> Devices -> Displays -> Apply

### Installation

#### Installing Drivers on CentOS 6.x~7.x

1. Open terminal
2. Run the following commands to install the driver.

```
# su
```

```
# sh setup.sh
```

```
# reboot
```

## Installing Drivers on CentOS 8 or later

1. Open terminal
2. Run the following commands to install the driver.

```
# xhost si:localuser:root
```

```
# su
```

```
# sh setup.sh
```

```
# reboot
```

## Uninstallation

1. Open terminal
2. Run the following commands to uninstall the driver.

```
# su
```

```
# sh remove.sh
```

## Touch Utility

### Run touch utility method 1

#### Run touch utility on CentOS 6.x

1. Clicking Applications at the menu bar.
2. On the expended Applications menu, point your mouse pointer to Accessories
3. click on touchtool.

#### Run touch utility on CentOS 7 or later

1. Open the Activities overview by clicking Activities at the top left of the screen,  
or press Windows key on your keyboard to open Dash menu.

2. Then type touchtool.

3. From the results, click on touchtool.

### **Run touch utility method 2**

1. Open terminal

2. Run the following commands to start touch utility.

```
# Touchpack
```